GENERATION FUTURE

PUREPOWER

USER INSTRUCTIONS

IMPORTANT SAFETY REMINDERS

User manual - This cleaner should only be used for its intended purpose as described in these instructions. Ensure that these are fully understood before operating this appliance.

Only use attachments recommended or supplied by Hoover.

When using cleaning tools, ensure that the cleaner is kept in the upright (parked) position. This will avoid possible damage to the carpet or floor covering. When cleaning stairs, DO NOT position the cleaner above you.

STATIC ELECTRICITY. Some carpets can cause a small build up of static electricity. Any static discharge is not hazardous to health.

DO NOT use your cleaner out of doors, on any wet surface or for wet pick up.

Keep hands, feet, loose clothing and hair away from rotating brushes.

DO NOT pick up hard or sharp objects, matches, hot ashes, cigarette ends or other similar items.

DO NOT pick up flammable liquids such as cleaning fluids, petrol, etc, or their vapours.

Aerosol sprays may be flammable. DO NOT spray near cleaner.

SUPPLY CORD. DO NOT run over the supply cord when using your cleaner or remove the plug by pulling on the supply cord.

FAULTS. DO NOT continue to use your cleaner if it appears to be faulty. If the supply cord is damaged stop using the cleaner IMMEDIATELY. The supply cord must be replaced by an authorised Hoover service engineer to avoid a safety hazard.

AFTER USE. Switch the cleaner off and remove the plug from the electricity supply. Always switch off and remove the plug before cleaning the appliance or attempting any maintenance task.

Safety with children, elderly or the infirm:
Do not let children play with the appliance or its controls. Please supervise the use of the appliance by older children, the elderly or the infirm.

HOOVER SERVICE. To ensure the continued safe and efficient operation of this appliance we recommend that any servicing or repairs are only carried out by an authorised Hoover service engineer.

In the unlikely event that any item is missing or you experience any problems with the product,
DO NOT TAKE IT BACK TO THE SHOP

Please contact the Hoover customer helpline:
Tel: 08444 995 599
Email: customer.services@hoovercandy.com

Should any faults occur with your cleaner during the first 12 months, contact the Hoover Customer Helpline on the number above.
If you are having difficulty in obtaining filters or any other accessories for your cleaner contact the Hoover Customer helpline or order online at **www.hooverspares.com**

Congratulations on the purchase of your new Hoover Purepower.

This highly advanced machine makes cleaning easier and more efficient.

You'll find it kinder to your carpets - and to you!

Please take the time to read this manual carefully.

You'll then be ready to make the most of the special features only the Hoover Purepower can offer!

WARNING! ELECTRICITY CAN BE EXTREMELY DANGEROUS

This appliance is double-insulated and must not be earthed.
The plug is fitted with a 13 amp fuse.
IMPORTANT: The wires in the mains lead are coloured in accordance with the following code:

Blue - NEUTRAL
Brown - LIVE

HOOVER®
PUREPOWER

48000164 - 3 Purepower UK IM.indd 2 18/11/2010 11:08:12

Effortless cleaning with your new Hoover

PUREPOWER

When first unpacking your cleaner please check all items are included:

Cleaner Body
Handle with securing screw
1st Extension Tube*
Long Crevice tool
2nd Extension Tube*
Dusting Brush
Grooming Nozzle
Pet Hair and Allergen Remover*
Hard Floor Caresse Nozzle*
Disposable Paper Bag
(*Certain models only)

If any parts are missing, call the Hoover helpline on 08444 995 599

PUREPOWER

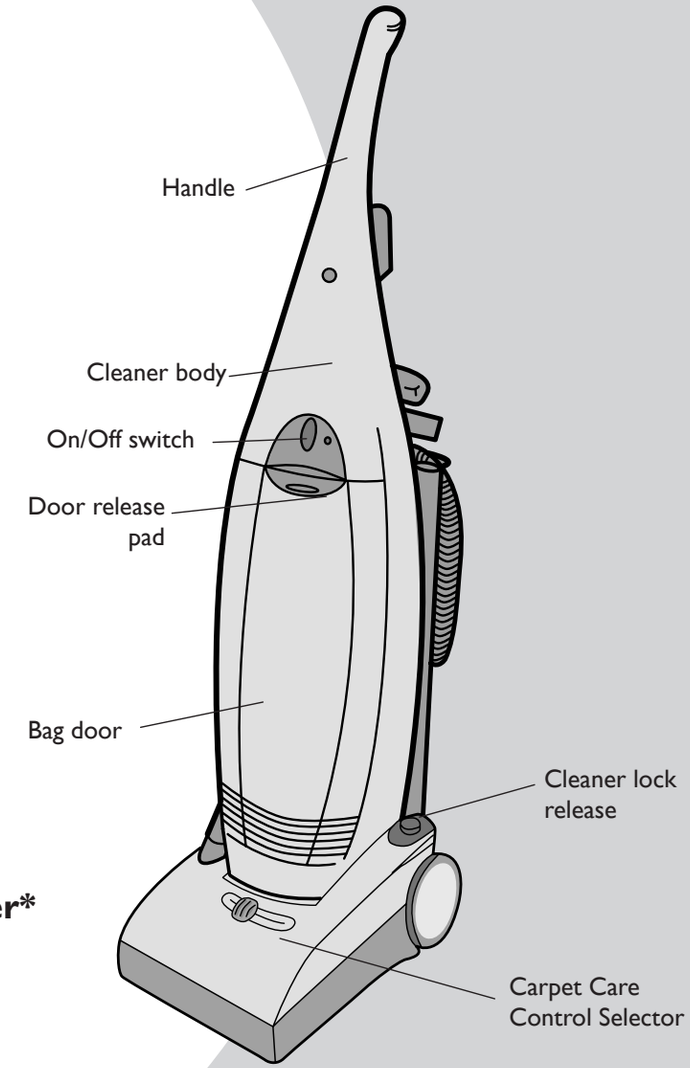

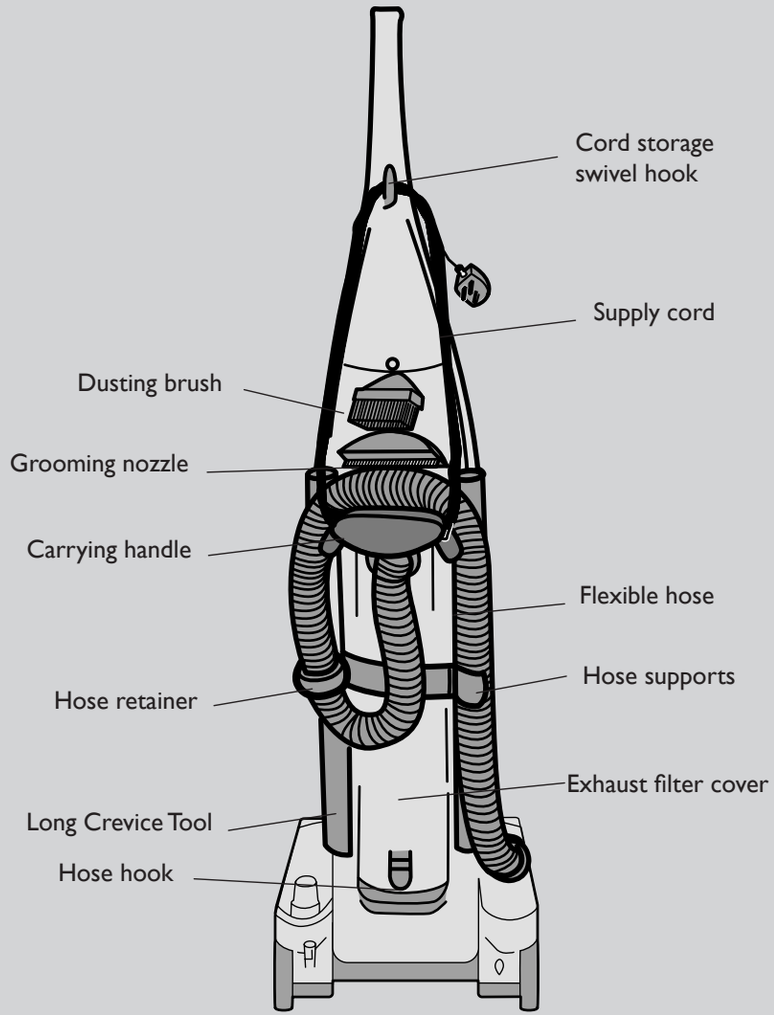

Hard Floor Caresse Nozzle*

Pet Hair & Allergen Remover*

* Certain models only

48000164 - 3 Purepower UK IM.indd 3 18/11/2010 11:08:13

PREPARING TO USE YOUR CLEANER

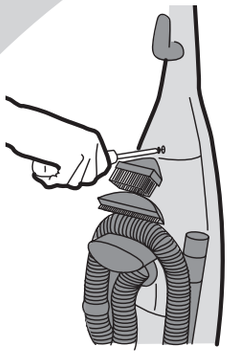

Insert handle into body of cleaner.
Slide into position.
Ensure handle is flush with body of cleaner.
Tighten large screw (pre-fitted to handle upper hole). Insert small screw into handle lower hole and tighten.

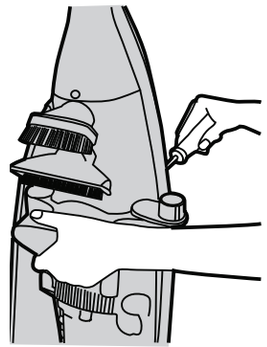

Affix carrying handle to the back of product

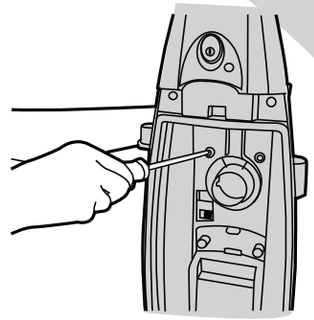

Screw top two provided screws to affix carrying handle in place

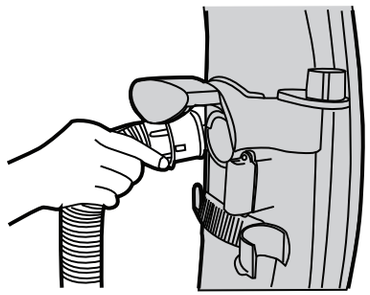

Connect hose to back of product.

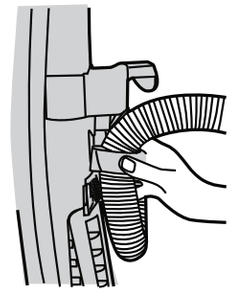

Latch hose retainer to hose support.

POWER SWITCH SETTING

Switching on and off

Push bottom of the On/Off switch to switch on.
Push top of the On/Off switch to switch off.

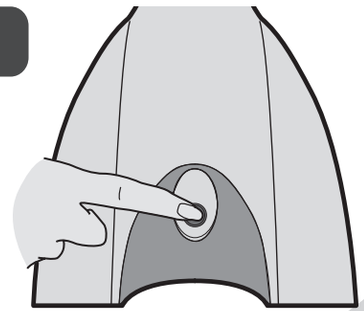

CARPET CARE CONTROL SELECTOR

The carpet care control selector raises or lowers the height of the nozzle. The nozzle height will not change until the handle is released. Try various settings until you get the best results for each of your carpets.

IMPORTANT: When cleaning hard floors such as vinyl or linoleum, move the "Carpet Care Control Selector" to the Hard floor position. Failure to do so may cause damage to the floor surface.

Ensure that the cleaner is in an upright (parked) position.

Slide selector to the position best suited to depth of carpet pile.

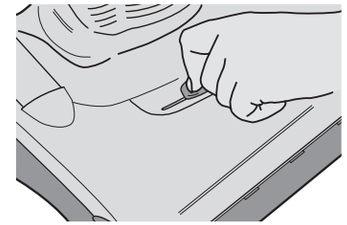

Note: Using this cleaner for loop carpets or carpets with pile greater than 30mm is not recommended. Please consult the floorcare/carpet manufacturer's recommended cleaning instruction before vacuuming.

CLEANER LOCK RELEASE

Unlock the cleaner by pressing down on pedal with foot. For floor cleaning under low furniture and some maintenance tasks simply press the pedal again and lower handle to the floor.

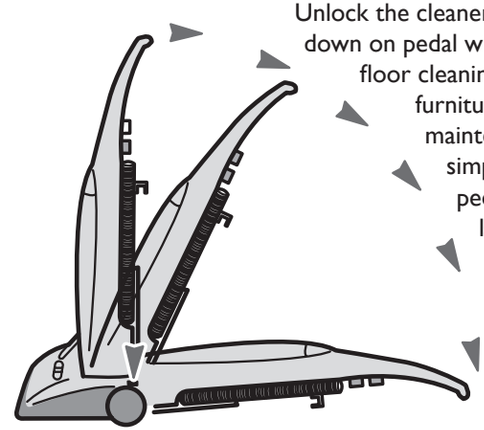

48000164 - 3 Purepower UK IM.indd 4 18/11/2010 11:08:15

CLEANING TOOLS*

IMPORTANT: When using cleaning tools, the cleaner must be kept in the upright (parked) position, particularly when cleaning stairs. The carpet height selector should also be set to tool mode:

Pet Hair & Allergen Remover *
Ideal for removing pet hairs.
Do not touch the rotating brush.

Hard Floor Caresse Nozzle*
Ideal for cleaning delicate surfaces.
For use combine with the Rigid Extension tube.

Extension Tube*
Fitted on the flexible hose and with accessories at its end, it is ideal for stair cleaning.

* Certain models only

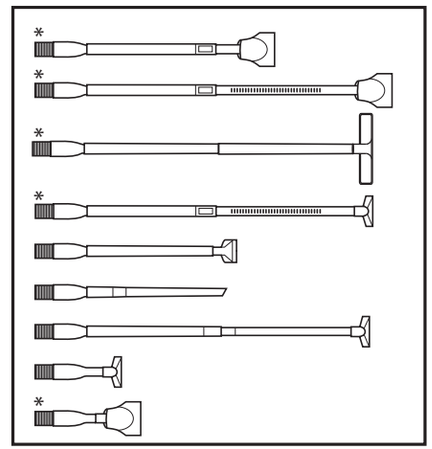

All accessories can fit on the end of the flexible hose or at the end of the extension tube*.
Combine accessories depending on use.

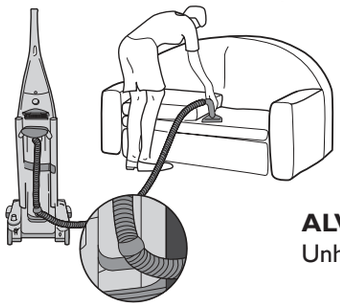

ALWAYS attach hose retainer to hook when using cleaning tools. Unhook after use.

CLEANING THE STAIRS

It is dangerous to place the cleaner above you whilst cleaning the stairs.

ALWAYS work with the cleaner below you. Ensure it is positioned up against the bottom step.

DO NOT attach hose retainer when cleaning the stairs.

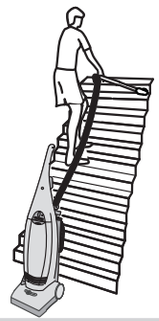

* Certain models only

CHANGING THE DISPOSABLE BAG

IMPORTANT: Switch cleaner off and remove plug from electricity supply before changing the bag. Your cleaner is supplied with a bag already fitted. This bag must not be re-used.

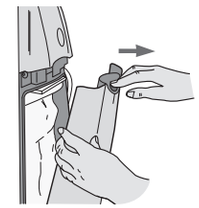

To remove bag:

Press down on the door release pad and remove door.

Gently pull bag collar retainer from the hose inlet by pulling off the stiff cardboard at the top of the bag.

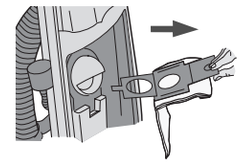

Slide bag from bag collar retainer by pulling on stiff cardboard at top of the bag collar. A shutter will automatically seal off bag opening.

Discard full bag.

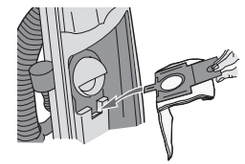

To fit new bag:

Push the tab on the cardboard collar into the slot beneath the hose inlet.

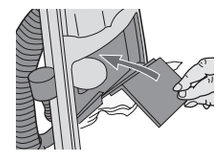

Push the bag collar over the hose inlet until it is firmly in place.

Open out the folds in the bag and refit bag door.

48000164 - 3 Purepower UK IM.indd 5 18/11/2010 11:08:16

CLEANING THE FILTERS*

Pre- motor filter

The pre-motor filter should be washed every three months.

The Carbon filter is normally maintenance free, this component should not be washed. If a replacement is required please contact our spares department.

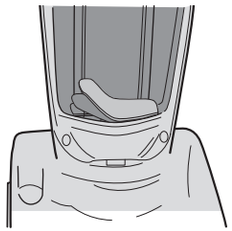

Remove bag door and lift out filter.

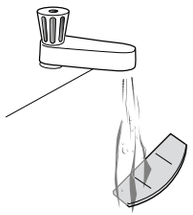

Wash filter under hand warm water.
DO NOT USE HOT WATER OR DETERGENTS!

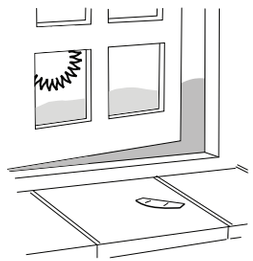

Remove excess water by shaking and leave to dry for 24 hours. Refit filters only when completely dry.

* Certain models only

! IMPORTANT: For optimum cleaning performance, always keep your filters clean.

Exhaust filter

The exhaust filter should be washed every month.

HEPA exhaust filter*

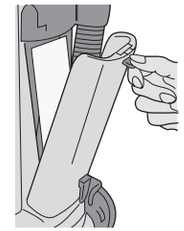

Press down on latch and remove the exhaust filter cover.

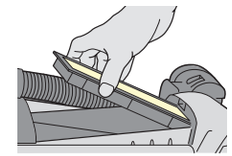

Lift out the exhaust filter.

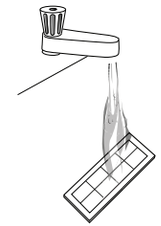

Wash filter under hand warm water.
DO NOT USE HOT WATER OR DETERGENTS!

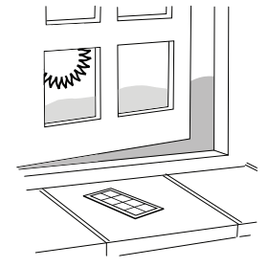

Remove excess water by shaking and leave to dry for 24 hours. Refit filters only when completely dry.

Microfilter exhaust filter*

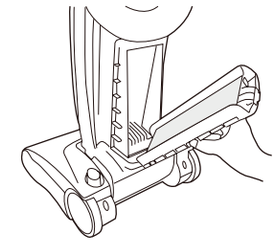

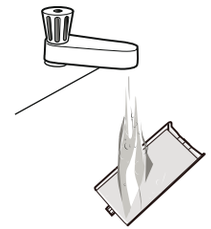

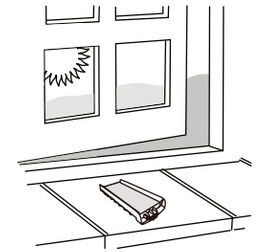

* Certain models only

48000164 - 3 Purepower UK IM.indd 6 18/11/2010 11:08:19

CHANGING BELT OR BRUSHES



IMPORTANT: Switch cleaner off and remove plug from electricity supply before checking the brushes or removing hood.

If your cleaner is not picking up efficiently, the belt or brushes (or both) may need replacing, but first make sure you have:

- Emptied the dust container
- Cleaned filters
- Checked for blockages

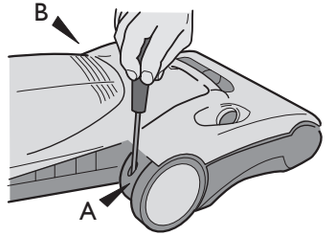

1

Remove hood

- Prise off the carpet care control selector.
- Remove hood screws A and B.
- Lift off hood.

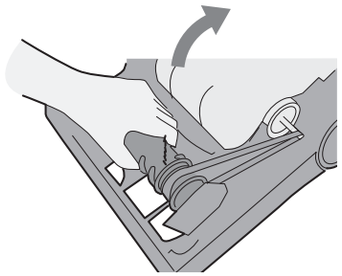

2

Remove brush assembly

- Inspect belt for signs of wear.
- To remove, pull brush cleaner assembly upwards out of cleaner housing. Remove belt from motor spindle then from brush assembly.

Replace belt

- Loop the new belt around the motor spindle then around the brush channel.

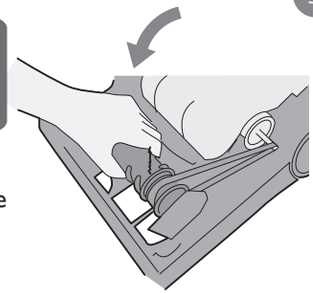

3

Refit brush assembly

- Hold the brush assembly and stretch the belt until brush mountings slot down into the cleaner housing. Rotate the brush to ensure free movement of the belt.

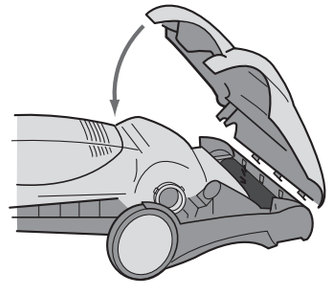

4

Refit hood

- Refit hood, ensuring the lugs along the front of hood are located in the slots along the front edge of baseplate.
- Secure hood, using screws A and B.

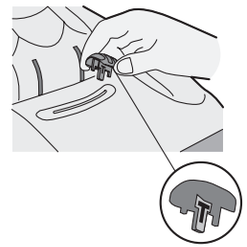

5

Refit carpet care control selector

- Ensure the raised face (T) is towards the front of the cleaner.

Removing a blockage from the Pet Hair & Allergen Remover*
(* Certain models only)

Open clip and lift cover to remove blockage.

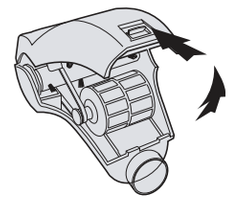

* Certain models only

CLEARING A BLOCKAGE

IMPORTANT: Switch the cleaner off and remove the plug from the electricity supply before dismantling cleaner.

This cleaner is unlikely to become blocked, except by over filling of the dust bag or accidentally picking up large solid objects. Clearing a blockage is simple.

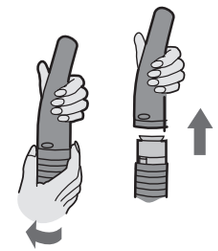

If cleaning tools were in use, check cleaning tool and extension tube first. Next check hose handgrip; to remove grip ribbed ring as shown, turn in direction of arrow and ease apart.

To check the hose, stretch it to full length and switch on the cleaner; the suction will dislodge most obstructions. If this is unsuccessful, switch off and unplug the cleaner. Remove the hose by turning it anti-clockwise as shown. Detach hose and remove blockage.

For blockages in cleaner base:

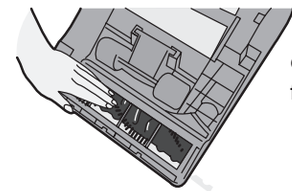

1. Turn the cleaner over and check that the brushes are free to rotate.

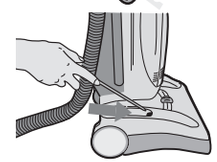

2. Check for a blockage in hose socket. Use a piece of wire or a blunt flexible rod to remove any obstructions.

48000164 - 3 Purepower UK IM.indd 7 18/11/2010 11:08:20

Genuine HOOVER Spares

Tel. 08443 712 758
www.hooverspares.com

Always replace parts with genuine Hoover spares. When ordering parts always quote your model number.

Hoover Customer Helpline

Should any faults occur with your cleaner during the first 12 months contact the Hoover Customer Helpline on the number below.

Tel: 08444 995 599
Email: customer.services@hoovercandy.com

Hoover have a computerised nationwide service network of over 500 engineers who will quickly respond to your call and guarantee your repair for 12 months.

CONSUMABLES	CODE
5 BAGS	H20 - 09173717
AGITATOR	Y14 - 04845056
BELT	V17 - 09161985
HOSE	D1 - 04345084
STANDARD FILTER KIT	U19 - 09186941
HEPA FILTER KIT	U25 - 09199050
PET HAIR AND ALLERGEN REMOVER	J21 - 04845086

Use only HOOVER spares

Quality

ISO 9001
Hoovers factories have been independently assessed for quality.
Our products are made using a quality system which meets the requirements of ISO 9001.

Environment - WEEE Directive

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

GUARANTEE STATEMENT

The guarantee conditions for the appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased, the bill of sale or receipt must be produced when making any claim under this guarantee.
Subject to change without notice.

48000164 - 3 Purepower UK IM.indd 8 18/11/2010 11:08:20

User checklist

If your cleaner is not working properly run through the following checklist.

1 Is there a working electricity supply to the cleaner?
Check with another electrical product.

2. Is the bag full or choked with fine dust?
To replace the bag, see the instructions on page 5.

3. Is the hose blocked?
To clear a blockage, see the instructions on page 7.

4. Is there a blockage in the cleaner base?
To clear a blockage, see the instructions on page 7.

5. Are the filters blocked?
To clear the filters, see the instructions on page 6.

6. Is the nozzle height set correctly?
To set the carpet care control selector, see the instructions on page 4.

7. Are the brushes rotating correctly?
To check the brushes, see the instructions on page 7.

8. Has the cleaner overheated?
If so, it will take about 30 minutes to reset itself.

If there is any doubt call the Hoover customer Helpline 08444 995 599 for advice. They may be able to assist you over the telephone.

WARNING!

A thermal cut out switches off the cleaner to prevent overheating if it is used when full or there is a blockage or dirty filters. If this should happen switch off, unplug and correct the fault.
It will take about 30 minutes for the cut out to automatically reset.

IMPORTANT: Do not run cleaner over the supply cord as this could damage the supply cord insulation.

* Certain models only

48000164 - 3 Purepower UK IM.indd 9 18/11/2010 11:08:20

48000164 - 3 Purepower UK IM.indd 10 18/11/2010 11:08:20

GENERATION FUTURE

Hoover Limited
Pentrebach
Merthyr Tydfil
Mid Glamorgan
CF48 4TU

HOOVER CUSTOMER HELPLINE
08444 995 599

© 2010 48000164-3